### English

EX-41088

### English



# EX-41088

## Anleituna

Vers. 1.0 / 05.02.19

### AUFBAU



#### **BESCHREIBUNG & TECHNISCHE DATEN**

Die EX-41088 ist eine PCI serielle RS-232 Karte mit 8 seriellen FIFO 16C550 Ports, für den Anschluss von High-Speed seriellen RS-232 Peripherie Geräten (z.B. Terminal, Modem, Plotter usw.). Der serielle PCI Bus unterstützt dabei optimal die Leistung des schnellen FTDI Chipset. Die Karte gewährleistet so eine sichere Datenübertragung und exzellente Performance von bis zu 921,6KBaud/s! Sie unterstützt alle PCI & PCI-X Slots mit 3.3V und 5Volt. Es ist nicht möglich die I/O Adressen und Interrupts manuell einzustellen, da die Einstellungen der Karte vom System (BIOS) und vom Betriebssystem automatisch vorgenommen werden.

Kompatibilität:	PCI & PCI-X, 5Volt oder 3,3Volt
Betriebssysteme:	Windows 9.x/ ME/ 2000/ XP/ Vista/ 7/ 8.x/ 10/ Server 20xx/ Linux/ MAC
Anschlüsse:	8x 9 Pin D-Sub serieller Stecker
Lieferumfang:	EX-41088, Treiber CD, Anleitung
Zertifikate:	

#### ANSCHLÜSSE

DB 9M

	9 Pin Stecker Seriell RS-232						
15	Pin	Signal	Pin	Signal	Pin	Signal	
(*****	1	CDC	4	DTR	7	RTS	
6 9	2	RXD	5	GND	8	CTS	
	3	TXD	6	DSR	9	RI	

#### CONNECTORS

DB62F:

02 Pin 3	52 Pin Serial KS-232 Female Connector								
Pin	Signal	Pin	Signal	Pin	Signal				
1	TXD 1	22	RXD 1	43	CTS 1				
2	DTR 1	23	DSR 1	44	RTS 1				
3	RXD 2	24	DCD 1	45	GND				
4	DSR 2	25	TXD 2	46	CTS 2				
5	DCD 2	26	DTR 2	47	RTS 2				
6	TXD 3	27	RXD 3	48	CTS 3				
7	DTR 3	28	DSR 3	49	RTS 3				
8	RXD 4	29	DCD 3	50	GND				
9	DSR 4	30	TXD 4	51	CTS 4				
10	DCD 4	31	DTR 4	52	RTS 4				
11	RXD 5	32	GND	53	CTS 5				
12	DSR 5	33	TXD 5	54	RTS 5				
13	DCD 5	34	DTR 5	55	GND				
14	TXD 6	35	RXD 6	56	CTS 6				
15	DTR 6	36	DSR 6	57	RTS 6				
16	RXD 7	37	DCD 6	58	GND				
17	DSR 7	38	TXD 7	59	CTS 7				
18	DCD 7	39	DTR 7	60	RTS 7				
19	RXD 8	40	GND	61	CTS 8				
20	DSR 8	41	TXD 8	62	RTS 8				

#### HARDWARE INSTALLATION

21

If you are ready with the jumper settings, please proceed with the following installation instructions. Because there are large differences between PC's, we can give you only a general installation guide. Please refer to your computer's reference manual whenever in doubt.

42

DTR 8

1. Turn off the power to your computer and any other connected peripherals.

DCD 8

- 2. Remove the mounting screws located at the rear and/ or sides panels of your Computer and gently slide the cover off.
- 3. Locate an available PCI expansion slot and remove its covers from the rear panel of your computer. Make sure it is the right PCI expansion slot for the card (see card description)
- 4. Align the card with the expansion slot, and then gently but firmly, insert the card. Make sure the card is seated and oriented correctly. Never insert the card by force!
- 5. Then connect the card with a screw to the rear panel of the computer case.
- 6. Gently replace your computer's cover and the mounting screws

### Windows

DRIVER INSTALLATION

After the hardware installation Windows will recognize the card automatically and install the drivers. If the driver should not be installed automatically, please insert the Driver CD into your CD-Rom drive (e.g. Drive D:) and open the folder "USB to IO/FTDI". Please select the folder with your operating system and install the driver (see Picture). Follow the hardware assistant and finish the installation. Important! Restart your PC in any case after installing the drivers.



#### CHECK INSTALLED DRIVER

Open the >Device manager<. Now you should see at "Ports (COM & LPT)" and "USB-Controller" the following new entry's:



If you see this or a similar information the device is installed correctly.

### Deutsch E

EX-41088

Deutsch



# EX-41088

### Manual

Vers. 1.0 / 05.02.19

### LAYOUT



#### **DESCRIPTION & TECHNICAL INFORMATION**

The EX-41088 is a plug & play high-speed serial RS-232 expansion card for the PCI Bus. It provides eight 9 pin high speed RS-232 serial ports. It uses data transfer rates up to 115.2Kbaud/s. The card design utilizes the 16C550 UART with 256byte buffer, which incorporates the latest in high speed interface technology. In combination with the fast PCI bus it provides a secure and very high data transfer on each single port. It supports all PCI & PCI-X slots with 3.3V and 5Volt. It is not possible to change the address or IRQ settings manually, they will be obtained automatically by the system (BIOS) and operating system.

Compatibility:	PCI & PCI-X, 5Volt or 3,3Volt
Connectors:	8x 9 Pin D-Sub Serial Connector
Extent of delivery:	EX-41088, Driver CD, Manual
Certificates:	

#### CONNECTORS

DB 9M

	9 Pin S	erial RS-232 Co	onnecto	r		
	Pin	Signal	Pin	Signal	Pin	Signal
*****	1	CDC	4	DTR	7	RTS
6 9	2	RXD	5	GND	8	CTS
	3	TXD	6	DSR	9	RI

#### ANSCHLÜSSE

DB62F:

Pin	Signal	Pin	Signal	Pin	Signal				
1	TXD 1	22	RXD 1	43	CTS 1				
2	DTR 1	23	DSR 1	44	RTS 1				
3	RXD 2	24	DCD 1	45	GND				
4	DSR 2	25	TXD 2	46	CTS 2				
5	DCD 2	26	DTR 2	47	RTS 2				
6	TXD 3	27	RXD 3	48	CTS 3				
7	DTR 3	28	DSR 3	49	RTS 3				
8	RXD 4	29	DCD 3	50	GND				
9	DSR 4	30	TXD 4	51	CTS 4				
10	DCD 4	31	DTR 4	52	RTS 4				
11	RXD 5	32	GND	53	CTS 5				
12	DSR 5	33	TXD 5	54	RTS 5				
13	DCD 5	34	DTR 5	55	GND				
14	TXD 6	35	RXD 6	56	CTS 6				
15	DTR 6	36	DSR 6	57	RTS 6				
16	RXD 7	37	DCD 6	58	GND				
17	DSR 7	38	TXD 7	59	CTS 7				
18	DCD 7	39	DTR 7	60	RTS 7				
19	RXD 8	40	GND	61	CTS 8				
20	DSR 8	41	TXD 8	62	RTS 8				

#### HARDWARE INSTALLATION

21

Wenn Sie die Karte installieren, beachten Sie bitte die folgenden Hinweise. Da es große Unterschiede zwischen PC's gibt, können wir Ihnen nur eine generelle Anleitung zum Einbau geben. Bei Unklarheiten halten Sie sich bitte an die Bedienungsanleitung Ihres Computersystems.

42

DTR 8

DCD 8

- 1. Schalten Sie Ihren Rechner und alle angeschlossenen Peripheriegeräte aus und ziehen Sie bei allen Geräten den Netzstecker.
- Lösen Sie die Schrauben des Gehäuses auf der Rückseite Ihres Computers und entfernen Sie vorsichtig das Gehäuse.
- Suchen Sie einen freien PCI Steckplatz und entfernen Sie das Slot Blech, stecken Sie die Karte vorsichtig in den ausgewählten PCI Steckplatz ein. Stellen Sie sicher das es sich um den richtigen Steckplatz handelt! (siehe Kompatibilität unter technische Daten)
- 4. Beachten Sie das die Karte korrekt eingesteckt wird und das kein Kurzschluss entsteht. Wenden Sie bitte keine Gewalt an um die Karte einzustecken!
- 5. Danach befestigen Sie die Karte bitte mit einer Schraube am Gehäuse.
- 6. Jetzt können Sie das Computergehäuse mit den Schrauben wieder schließen.

EX-410

# TREIBER INSTALLATION

#### Windows

Nach Abschluss der Hardwareinstallation erkennt das Betriebssystem automatisch die Karte und installiert diesel Falls die Treiber nicht automatisch installiert werden sollten, legen Sie nun die Treiber CD in Ihr CD-ROM Laufwerk (z.B. Laufwerk D:) ein und öffnen Sie den Ordner "USB\_to\_IO/FTDI". Nun wählen Sie den Ordner Ihres Betriebssystems aus und installieren Sie die Treiber (siehe Abbildung). Folgen Sie den Installationsanweisungen und schließen Sie die Installation ab. **Wichtig!** Starten Sie Ihren PC nach der Installation neu.



#### ÜBERPRÜFEN DES INSTALLIERTEN TREIBER

Öffnen Sie den >Geräte-Manager<. Jetzt müssten Sie unter "Anschlüsse (COM & LPT)" und unter "USB-Controller" folgende Einträge sehen:



Sind diese oder ähnliche Einträge vorhanden, ist die EX-41088 richtig installiert.