


CONNECTORS & STATUS LED'S

USB 2.0 A-Connector:



USB 2.0 A-Plug			
Pin	Signal	Pin	Signal
1	VCC	3	DATA+
2	DATA-	4	GND

Status LED's:

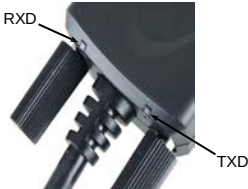

HARDWARE INSTALLATION

Because there are large differences between PC's, we can give you only a general installation guide for the EX-1311-2. Please refer your computers reference manual whenever in doubt.

1. Connect the EX-1311-2 USB to the USB A-Port at the your PC.
2. If you would like to screw the serial cable to the 9 Pin connector of the EX-1311-2, then unscrew the screws (see Picture 1) and screw the supplied hexagon nuts into the holes on the EX-1311-2 (see Picture 2). Now you can attach the serial cable to the EX-1311-2.



Picture 1




Picture 2

3. When you are ready you can start your PC and continue with the point „Driver Installation“.

DRIVER INSTALLATION


Windows

After the hardware installation Windows will recognize the device automatically and install the drivers. If the driver should not be installed automatically, please insert the Driver CD into your CD-Rom drive (e.g. Drive D:) and open the folder „USB_to_IO/FTDI“. Please select the folder with your operating system and install the driver (see Picture). Follow the hardware assistant and finish the installation. **Important!** Restart your PC in any case after installing the drivers.

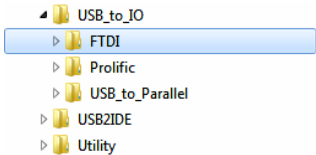

CHECK INSTALLED DRIVER

Open the >Device manager<. Now you should see at „Ports (COM & LPT)“ and „USB-Controller“ the following new entry:

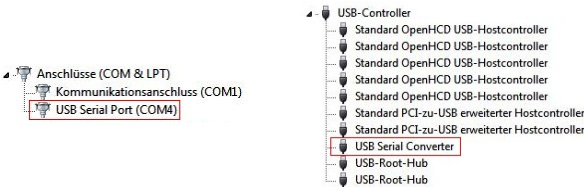

If you see this or a similar information the device is installed correctly.

CLEANING

For cleaning please use only a dry fluff less cloth and remove the dirt with gently pressure. In the area of the connectors please make sure that no fibres from the cloth remain in the connect-ors. **Attention! Never use a moist or wet cloth for cleaning!**



Germany:
EXSYS Vertriebs GmbH
Industriestrasse 8
61449 Steinbach
www.exsys.de

Switzerland:
EXSYS Vertriebs GmbH
Dübendorferstrasse 17
8602 Wangen
www.exsys.ch

Italy:
EXSYS Italia Srl
Via Belvedere, 45/B
I-22100 Como
www.exsys.it



EX-1311-2

Manuale

Vers. 1.1 / 12.10.23

STRUTTURA



DESCRIZIONE & DATI TECNICI

L'EX-1311-2 è un convertitore per la conversione dell'interfaccia USB 2.0 in un'interfaccia RS-232 con porta FIFO 16C550 per il collegamento di periferiche seriali RS-232 ad alta velocità (ad es. modem, plotter ecc.). L'EX-1311-2 è dotato di un connettore USB 2.0 A per il collegamento al PC e di un connettore seriale RS-232 a 9 pin. Il convertitore USB è compatibile con Hot Plug & Play. Non sono necessari ponticelli o impostazioni per impostare gli indirizzi di I/O e gli interrupt, poiché le impostazioni vengono effettuate automaticamente dal BIOS del sistema e durante l'installazione del sistema operativo.

Compatibilità: USB 1.1 & 2.0
Sistemi Operativi: Windows 9.x / ME / 2000 / XP / Vista / 7 / 8.x / 10 / 11 / Server 20xx / Linux / MAC
Attacchi: 1x USB 2.0 Type-A; 1x 9 Pin RS-232 Seriale
Contenuto: EX-1311-2, 2x Dadi esagonali, Driver su CD, Manuale
Certificati: CE, FCC, RoHS, UKCA

ATTACCHI & STATO DEL LED

RS-232 Assegnazione dei pin:

DB 9M

Cablaggio RS-232

9 Pin RS-232 Seriale			
Pin	Segnale	Pin	Segnale
1	DCD	6	DSR
2	RXD	7	RTS
3	TXD	8	CTS
4	DTR	9	RI
5	GND		

DB9 (EX-1311-2)	RS-232 (dispositivo)
1 DCD	1 DCD
2 RXD	2 RXD
3 TXD	3 TXD
4 DTR	4 DTR
5 GND	5 GND
6 DSR	6 DSR
7 RTS	7 RTS
8 CTS	8 CTS


ATTACCHI & STATO DEL LED

USB 2.0 Type-A:



USB 2.0 Type-A			
Pin	Segnale	Pin	Segnale
1	VCC	3	DATA+
2	DATA-	4	GND

Stato LED:

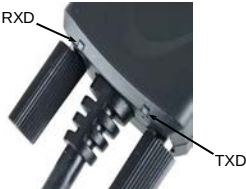

INSTALLAZIONE HARDWARE

Si prega di osservare le seguenti istruzioni per l'installazione. Poiché esistono notevoli differenze tra i vari PC, possiamo fornire solo istruzioni generali per il collegamento dell'EX-1311-2. In caso di dubbi, consultare le istruzioni per l'uso del proprio sistema informatico.

- Collegare l'EX-1311-2 a una presa USB A del PC.
- Se si desidera avvitare il cavo seriale al connettore a 9 pin dell'EX-1311-2, svitare le viti zigrinate (vedi figura 1) e avvitare i dadi esagonali in dotazione nei fori dell'EX-1311-2 (vedi figura 2). A questo punto è possibile collegare il cavo seriale all'EX-1311-2.

Rimozione delle viti zigrinate



Fig. 1

Inserimento dei dadi esagonali




Fig. 2

- A questo punto è possibile avviare il PC e continuare con "Installazione driver".

INSTALLAZIONE DRIVER


Windows

Una volta completata l'installazione dell'hardware, il sistema operativo riconosce automaticamente l'adattatore e lo installa! Se i driver non vengono installati automaticamente, inserire il CD dei driver nell'unità CD-ROM (ad es. unità D:) e aprire la cartella "USB_to_IO/FTDI". Selezionare la cartella del proprio sistema operativo e installare i driver all'indirizzo (vedi figura). Seguire le istruzioni di installazione e completare l'installazione. Importante! Riavviare il PC dopo l'installazione.

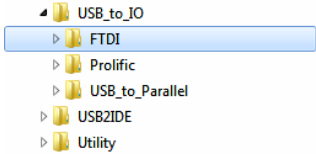

VERIFICA INSTALLAZIONE DRIVER

Aprire la >Gestione dispositivi<; Dovrebbe essere presente la seguente voce sotto "Porte (COM e LPT)" e "Controller USB":

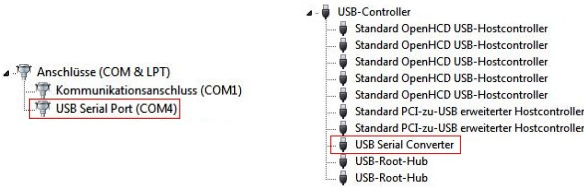

Se questa o una voce simile è presente, l'EX-1311-2 è installato correttamente.

PULIZIA

Per la pulizia del dispositivo, utilizzare esclusivamente un panno asciutto e privo di lanugine e rimuovere lo sporco con una leggera pressione. Nell'area dei collegamenti, assicurarsi che non rimangano fibre del panno nella presa. **Non utilizzare mai un panno umido o bagnato per la pulizia!**



Germany:
EXSYS Vertriebs GmbH
Industriestrasse 8
61449 Steinbach
www.exsys.de

Switzerland:
EXSYS Vertriebs GmbH
Dübendorferstrasse 17
8602 Wangen
www.exsys.ch

Italy:
EXSYS Italia Srl
Via Belvedere, 45/B
I-22100 Como
www.exsys.it



EX-1311-2

Manual

Vers. 1.1 / 12.10.23

LAYOUT



DESCRIPTION & TECHNICAL INFORMATION

The EX-1311-2 is a converter for converting USB 2.0 to RS-232 interface with FIFO 16C550 port for connecting high speed serial RS-232 peripheral devices (e.g. modem, plotter etc.). The EX-1311-2 is equipped with a USB 2.0 A-Connector for connection to the PC and a RS-232 serial 9 pin connector. The USB converter is hot plug & play capable. No jumpers or settings are required for I/O address and interrupt settings, as the settings are automatically made by the system BIOS and during the installation of the operating system.

Compatibility:	USB 1.1 & 2.0
Operating Systems:	Windows 9.x / ME / 2000 / XP / Vista / 7 / 8.x / 10 / 11 / Server 20xx / Linux / MAC
Connectors:	1x USB 2.0 A-Connector, 1x 9 Pin Serial RS-232 Connector
Extent of delivery:	EX-1311-2, 2x Hexagon Nuts, Driver CD, Manual
Certificates:	CE FCC RoHS

CONNECTORS & STATUS LED'S

RS-232 Pin Assignments:

DB 9M



9 Pin Serial Connector			
Pin	Signal	Pin	Signal
1	DCD	6	DSR
2	RXD	7	RTS
3	TXD	8	CTS
4	DTR	9	RI
5	GND		

RS-232 Cable Wiring

DB9 (EX-1311-2)	RS-232 (Device)
1 DCD	1 DCD
2 RXD	2 RXD
3 TXD	3 TXD
4 DTR	4 DTR
5 GND	5 GND
6 DSR	6 DSR
7 RTS	7 RTS
8 CTS	8 CTS