

HARDWARE INSTALLATION


Please note the following installation instructions. Because there are large differences between the PC's, we can give you only a general installation instructions for the EX-6072-4K. Please refer your computer's reference manual whenever in doubt.

1. Turn off the power to your computer and any other connected peripherals.
2. Remove the mounting screws located at the rear and/or sides panels of your Computer and gently slide the cover off.
3. Locate an available PCI-Express expansion slot and insert the card. Make sure that the card is plugged in correctly.
4. Then attach the card with a screw to the rear panel of the computer.
5. Gently replace your computer's cover and the mounting screws.

DRIVER INSTALLATION


Windows

After completing the hardware installation, the operating system will automatically the card and install this! If the driver should not be installed automatically, insert the driver CD into you CD-ROM drive (eg drive D:) and then open the folder „LAN/Realtek/RTL8111B~G“. Please select the folder with your operating system and install the driver (see Picture). Follow the hardware assistant and finish the installation. **Important!** Restart your PC in any case after installing the drivers.

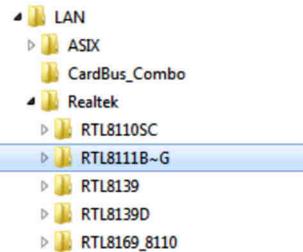

CHECK INSTALLED DRIVER


Open the >Device manager<. Now you should see at „Network adapters“ the following new entry's:



If you see this or a similar information the device is installed correctly.



AUFBAU

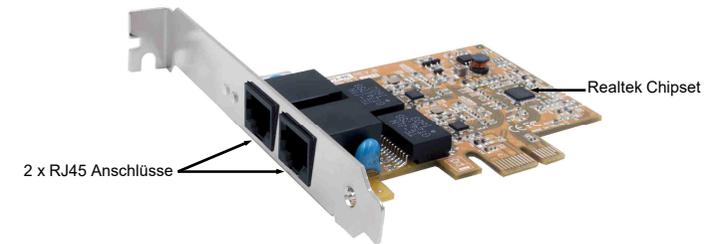

BESCHREIBUNG & TECHNISCHE DATEN

Die EX-6072-4K ist eine high speed Gigabit Ethernet PCI-Express Karte. Sie ist mit zwei externen Ports ausgestattet. Die Ports an der EX-6072-4K sind mit einer 4KV Surge Protection ausgestattet. Sie unterstützt alle PCI-Express Slots von x1 bis x16. Der serielle PCI-Express Bus unterstützt optimal die Leistung des schnellen Realtek Chipsatz. Die EX-6072-4K gewährleistet so eine sichere Datenübertragung und exzellente Performance von bis zu 1Gbit! Im Lieferumfang ist zusätzlich ein Low Profile Bügel enthalten, für den Einbau in schmale Gehäuse.

Kompatibilität: PCI-Express x1 bis x16
Betriebssysteme: Windows 98SE/ ME/ 2000/ XP/ Vista/ 7/ 8.x/ 10/ Server 20xx/ Mac/ Linux/ UNIX/ Novell
Anschlüsse: 2x RJ45 Gigabit Ethernet Anschluss
Lieferumfang: EX-6072-4K, Low Profile Bügel, Treiber CD, Anleitung

Zertifikate: CE FC RoHS REACH

ANSCHLÜSSE

RJ45 Anschluss:



RJ45 Anschluss					
Pin	Signal	Pin	Signal	Pin	Signal
1	BI_DA+	4	BI_DC+	7	BI_DD+
2	BI_DA-	5	BI_DC-	8	BI_DD-
3	BI_DB+	6	BI_DB-		

HARDWARE INSTALLATION


Beachten Sie bitte die folgenden Installationshinweise. Da es große Unterschiede zwischen PC's gibt, können wir Ihnen nur eine generelle Anleitung zum Einbau der EX-6072-4K geben. Bei Unklarheiten halten Sie sich bitte an die Bedienungsanleitung Ihres Computersystems.

1. Schalten Sie Ihren Rechner und alle angeschlossenen Peripheriegeräte aus und ziehen Sie bei allen Geräten den Netzstecker.
2. Lösen Sie die Schrauben des Gehäuses auf der Rückseite Ihres Computers und entfernen Sie vorsichtig das Gehäuse.
3. Suchen Sie jetzt einen freien PCI-Express Steckplatz und stecken Sie die EX-6072-4K vorsichtig in den ausgewählten PCI-Express Steckplatz ein. Beachten Sie, das die EX-6072-4K korrekt eingesteckt ist und das kein Kurzschluss entsteht.
4. Danach befestigen Sie die EX-6072-4K mit einer Schraube am Gehäuse.
5. Jetzt das Computergehäuse mit den Schrauben wieder schließen.

TREIBER INSTALLATION


Windows

Nach Abschluss der Hardwareinstallation erkennt das Betriebssystem automatisch die Karte und installiert diese! Falls die Treiber nicht automatisch installiert werden sollten, legen Sie nun die Treiber CD in Ihr CD-ROM Laufwerk (z.B. Laufwerk D:) ein und öffnen Sie den Ordner „LAN/Realtek/RTL8111B-G“. Nun wählen Sie den Ordner Ihres Betriebssystems aus und installieren Sie die Treiber (siehe Abbildung). Folgen Sie den Installationsanweisungen und schließen Sie die Installation ab. **Wichtig!** Starten Sie Ihren PC nach der Installation neu.

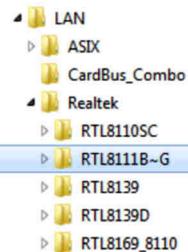

ÜBERPRÜFEN DES INSTALLIERTEN TREIBER


Öffnen Sie den >Geräte-Manager<. Jetzt müssten Sie unter „Netzwerkadapter“ folgende Einträge sehen:



Sind diese oder ähnliche Einträge vorhanden, ist die Karte richtig installiert.



LAYOUT

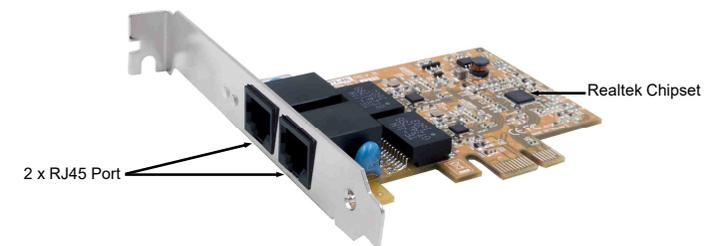

DESCRIPTION & TECHNICAL INFORMATION

The EX-6072-4K is a plug & play high-speed Gigabit Ethernet PCI-Express expansion card. It provides 2 external RJ45 Gigabit ports. The ports on the EX-6072-4K are equipped with a 4KV Surge Protection. It uses data transfer rates up to 1Gbit on each port. The design fully utilize the Realtek chipset, which represents the latest in high speed network interface technology. It provides a secure and very high data transfer rate. It supports all PCI-Express slots x1 to x16 and almost every operating system. It is also supplied a Low Profile bracket for slim line cases.

Compatibility: PCI-Express x1 to x16
 Operating Systems: Windows 98SE/ ME/ 2000/ XP/ Vista/ 7/ 8.x/ 10/ Server 20xx/ Mac/
 Linux/ UNIX/ Novell
 Connectors: 2x RJ45 Gigabit Ethernet Port
 Extent of delivery: EX-6072-4K, Low Profile Bracket, Driver CD, Manual

Certificates: CE FC RoHS

CONNECTORS

RJ45 Port:



RJ45 Port					
Pin	Signal	Pin	Signal	Pin	Signal
1	BI_DA+	4	BI_DC+	7	BI_DD+
2	BI_DA-	5	BI_DC-	8	BI_DD-
3	BI_DB+	6	BI_DB-		